


ZANUSSI

DEHUMIDIFIER

ZD2733

User Manual

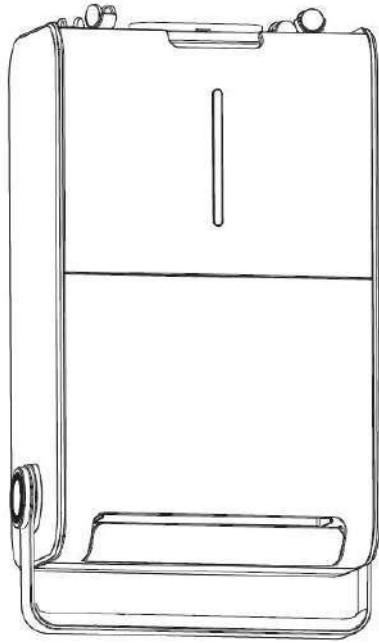


Thank you for choosing this product. Please read this instruction manual before using it.
Please allow the machine to stand upright for more than 2 hours before use.
ZANUSSI is a registered Trademark used under license from AB Electrolux (publ)

ZANUSSI

抽濕機

型號：ZD2733

使用說明書

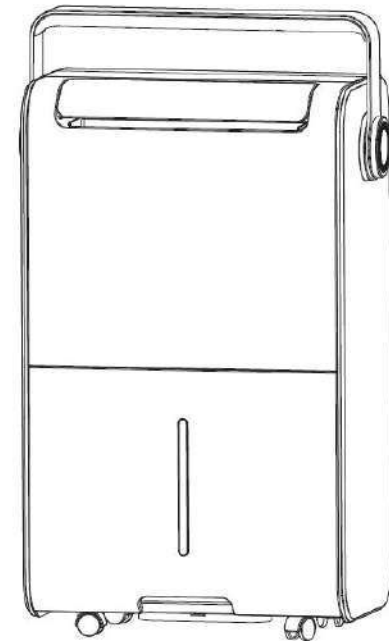

*使用本產品前請仔細閱讀本說明書，及所有安全注意事項，並請妥善保存以備日後參考查閱。

為了避免機身內部受損，使用前至少要让機身直立2小時以上。

ZANUSSI is a registered Trademark used under license from AB Electrolux (publ)

Table of Contents

Safety Instructions.....	1
Parts Description.....	2
Prior to Operation.....	3
Continuous Drainage.....	3
Operation Instructions.....	4
Cleaning.....	8
Storage.....	9
Display Error Codes.....	9
Trouble Shooting.....	10
Specifications.....	11

目錄

安全注意事項.....	1
產品零件介紹.....	2
使用前須知.....	3
連續排水.....	3
操作說明.....	4
清潔.....	8
存儲.....	9
故障代碼顯示.....	9
疑難小百科.....	10
產品參數表.....	11

Safety Instruction

1. To avoid electric shock, fire or injury, please read the user manual carefully before using the

appliance and keep it for future reference.

2. This appliance is for household use only. Please use suitable power source

(220-240V~/50Hz).

3. Never immerse the appliance in water or other liquids.

4. Do not use the appliance under direct sunshine.

5. Please turn off the appliance when not in use otherwise it may result in danger.

6. Please turn off the appliance and unplug the socket when unattended otherwise it may result in danger.

7. Keep the appliance away from children.

8. The appliance is not intended for use by persons (including children) with reduced physical,

sensor or mental capabilities, or lack of experience and knowledge, unless they have been

given supervision or instruction concerning use of the appliance by a person responsible for

their safety.

9. Children should be supervised to ensure that they do not play with the appliance.

10. With any indication of malfunction, please stop using the appliance immediately to avoid

hazards. Contact the authorized service center for repair. Do not attempt to repair or

change any parts by yourself.

11. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or

similarly qualified persons in order to avoid hazards.

12. Please turn off and unplug the appliance before cleaning or maintenance.

13. Clean the surface of the appliance with a dry cloth. Do not use corrosive detergent or

solvent to clean. Do not swash the appliance with water.

14. Please turn off and unplug the appliance when not in use. Make sure the power is off

before pulling out the plug. Do not pull the cord.

15. When the appliance is not in use for a prolonged period, please turn it off, unplug it, pack it

well, and store it in dry cool place.

16. Forbid to put flammable and explosive objects around the appliance, and do not use the

appliance in an environment full of flammable gas and powder. Keep away from any fire

and heat sources.

17. Please put the power cord in the right place in order to avoid tripping the appliance over.

18. Do not put any objects on the appliance or put the appliance below a socket-outlet.

19. Please keep the air inlet and the air outlet unblocked to minimize the risk of fire or

malfunction.

20. Ensure no water or raindrop leaks into the appliance in order to avoid electric shock. Do not

put flammable objects or wet clothes on the air outlet in order to avoid short circuit or fire.

21. Please do not place the air inlet or the air outlet near to curtains or walls when operation

because it will block the air current and cause fire. The appliance should be installed at

minimum distant of 10 cm from the wall or other obstacles.

22. To prevent spillage, please empty the water tank before relocating the appliance.

23. Do not tip the appliance to any side as escaping water could damage the appliance.

24. Please do not insert any objects into the air inlet or the air outlet in order to avoid electric

shock.

25. After a period of operation, abnormal noise and uneven air volume may appeared because

of dust blocking airflow. It will disappear after cleaning the dustproof filter.

26. Do not use any bug sprays or other flammable cleaners on the appliance.

Note: To avoid any malfunction or damage, do not tilt or place the appliance horizontally under

any operation.


安全注意事項

- 為避免觸電、火警或人身傷害的危險，在使用本機前，請仔細閱讀本說明書，並保留作日後參考。
 - 本機只供家庭用途及只能在規定電壓和頻率(220-240V~/50Hz)下使用。
 - 請勿將本機浸放於水或其他液體中。
 - 請勿在陽光直接照射下使用本機。
 - 為保障安全，不使用本機時，必須關機，以免發生意外。
 - 當使用者離開產品時，必須關機及拔掉插頭，以免發生意外。
 - 請確保兒童遠離本機。
 - 除非有安全人員的指導或協助下，並確保使用者的安全，否則本機不可由兒童、精神病人、殘疾人士及反應過慢之人士使用。
 - 請照顧好小孩，不要讓小孩把玩本機。
 - 如果本機出現任何損壞或故障，為避免危險，請立即停止使用，並與本公司的維修中心聯繫，讓合資格人員檢查及維修。請勿自行拆卸、檢查或更換不符合安全規格的配件。
 - 如果電源線損壞，為免發生意外，電源線必須由廠方、廠方指定的維修中心或同等合資格的技術人員進行更換。
 - 清潔或檢查本機前，必須先關機及拔掉插頭。
 - 清潔本機時，應用乾布抹擦，不要用任何腐蝕性的洗滌劑或溶劑等產品清潔，及嚴禁用水沖洗。
 - 停止使用時，應先關機並將電源插頭拔下。拔下插頭時應注意安全，不要用手拉拔電源線。
 - 本機長期不使用時，應關機及拔下電源插頭，並包裝好本機以防止灰塵進入機內，以及存放於乾爽通風處。
 - 嚴禁擺放易燃、易爆物品在本機周圍，也不可在充滿可燃氣體及粉塵的場合下使用本機。請將本機遠離任何火源及熱源。
 - 電源線要擺放好，防止行走時拌倒機身。
 - 請勿放置任何物品在本機上亦不可將本機放置在電源插座的下方。
 - 保持背部出入風口暢通，以避免發生火警意外或故障。
 - 請確定沒有水滴或雨水進入本機內，以避免發生漏電危險。嚴禁將可燃物及未乾的衣物覆蓋在本機出風口上，避免發生火災或觸電危險。
 - 當使用本機時，不可將出入風口貼近牆壁、窗簾等物件，否則會阻塞氣流，而發生火警意外。本機應放置於距離牆或其他障礙物至少 10 釐米的距離。
 - 為避免溢出，移動前請先將水箱清空。
 - 請勿傾斜放置本機，漏出的水可能會導致機器毀壞。
 - 請勿把任何物品插入出入風口內，以免觸電。
 - 本機在使用一段時間後，若出現異聲或風量不均勻現象，可能是空氣過濾網框上的灰塵太多而阻塞氣流，此時請清潔空氣過濾網後便可恢復正常。
 - 請勿向本機噴灑任何易燃清潔劑或殺蟲劑等。
- 注意: 為避免任何損壞或故障，在任何情況下請勿傾斜或橫放置此產品。

Parts Description


Components

1. Handle
2. Water tank
3. Castors
4. Air outlet filter
5. Air deflector
6. Control panel
7. Air filter
8. Water outlet cover
9. Power cord

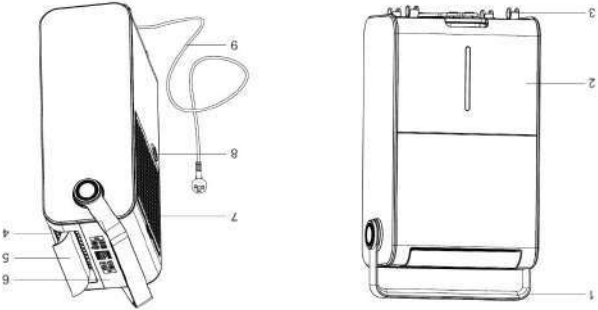


產品零件介紹

1. 手柄
2. 水箱
3. 腳輪
4. 出風口
5. 導風板
6. 控制台
7. 空氣濾網
8. 排水口蓋
9. 電源線

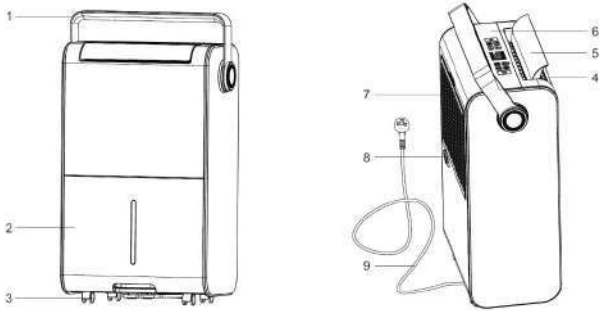


控制台介紹

10. 電源鍵
11. 自動模式鍵
12. 負離子鍵
13. 上/下鍵
14. 鎖鍵
15. 定時鍵
16. 擺風鍵
17. 風速鍵
18. 模式鍵
19. 負離子指示燈
20. 除霜指示燈
21. 水滿指示燈
22. 定時指示燈
23. 風速指示燈
24. 乾衣指示燈
25. 空淨指示燈
26. 睡眠指示燈
27. 擺風指示燈
28. 鎖鍵指示燈
29. 自動除濕指示燈

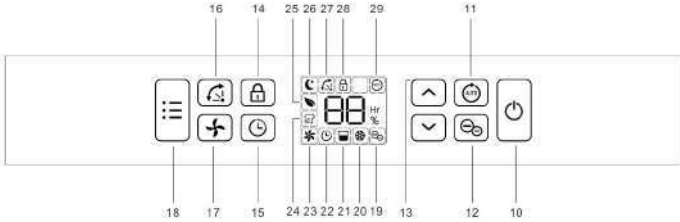


Control Panel

10. Power button
11. Auto button
12. Ionizer button
13. Up and Down buttons
14. Childlock button
15. Timer button
16. Air deflector button
17. Fan speed button
18. Mode selection button
19. Ionizer indicator
20. Defrost indicator
21. Tank full indicator
22. Timer indicator
23. Fan speed indicator
24. Laundry drying indicator
25. Air purifying indicator
26. Sleeping indicator
27. Air deflector indicator
28. Childlock indicator
29. Auto dehumidifying indicator

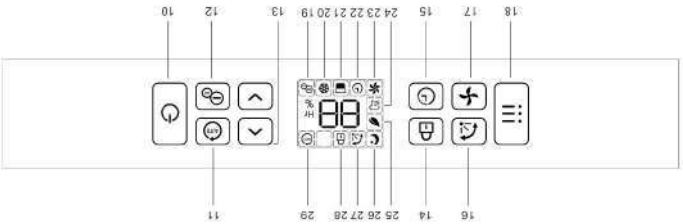

使用前須知

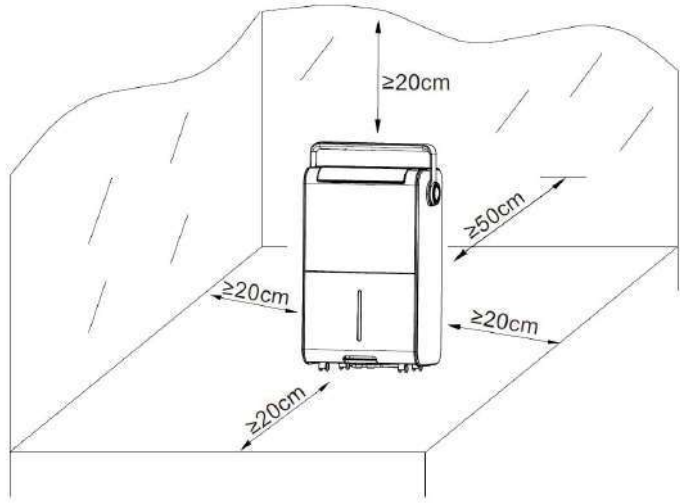

- 將除濕機直立放置在穩定、平坦的地面上。
- 確保除濕機與牆壁或傢俱保持至少 50 釐米的安全距離。
- 供電電源應與銘牌上的數值相符，電源插座需接地。
- 確保水箱安裝正確，如果水箱已滿或未裝好，液晶顯示幕上會顯示水箱滿指示符，除濕機將停止工作。
- 打開電源並按照以下說明運行機器。

連續排水

一般來說，機器工作時，冷凝水會進入水箱，如果要連續排水，請按以下步驟操作：


- 1、拿下下出水口蓋子。
 - 2、將內徑 14mm 的排水管插入出水口。
- 請始終確保管道正在下坡，沒有堵塞或扭結。

Continuous Drainage

In general, water will be collected by tank, if you want to continuous drainage, please do steps as follows:

1. Unplug the drainage outlet cover.
 2. Insert the drainage pipe with 14mm inner diameter into water outlet.
- Please always make sure the pipe is going downhill, is not blocked or kinked.

- Place the dehumidifier in an upright position on a stable, flat surface.
- Ensure the dehumidifier is at a safe distance at least 50cm away from a wall or furniture.
- Supply power should be in correspondence with the value on the nameplate, power outlet needs to be grounded.
- Ensure the tank is correctly fitted, if the tank is full or not in lace, the tank full indicator will be shown on LCD display, the dehumidifier will stop working.
- Turn on the power and run the machine as per instructions below.

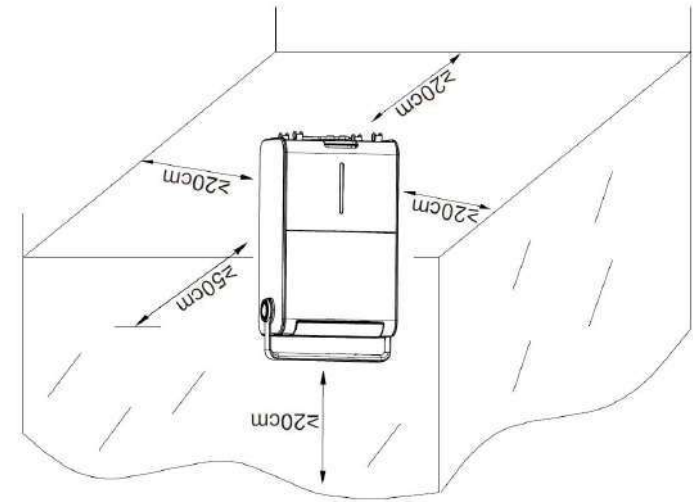

Prior to Operation

Operation Instructions

Switch On / Switch Off The Unit [Power button]



Connect to the power supply and press the power button once to turn on the unit, the unit runs by default mode on manual continuous dehumidifying with medium fan speed, the on/off indicator will be on.

Auto Dehumidifying Function [Auto button]



Press the auto button to select the Auto dehumidifying mode, the unit runs automatically accordance to the ambient humidity detected below.

Ambient RH% detected	Compressor	Fan Speed Level
RH% > 65%	Working	High
55% ≤ RH% ≤ 65%	Working	Low
RH% < 55%	Stop working	Low

Up/Down buttons are invalid.

Humidity Setting [Up/Down buttons]



Press the up/down buttons to select your preferred humidity from CO-35%-40%-45%-50%-55%-60%-65%-70%-75%-80%-CO. CO means continuous dehumidifying regardless of ambient humidity.

操作說明

開/關機【電源按鍵】



接通電源，按一次電源鍵開機，顯示幕顯示 50%，2 秒後隨即顯示市內濕度。
機器將以默認出廠預設中速風、CO 手動連續除濕模式運行。
再按電源鍵，機器停止工作。

自動除濕模式【自動除濕鍵】



按自動鍵選擇自動除濕模式，機器會根據檢測到的環境濕度自動工作。

環境濕度 RH%	壓縮機工作狀態	風速
RH% > 65%	工作	高風
55% ≤ RH% ≤ 65%	工作	低風
RH% < 55%	停止工作	低風

上/下調節按鈕無效。

濕度調節【上/下鍵】



手動除濕模式下，按上/下鍵可進行濕度設定，設定範圍為：
CO-35%-40%-45%-50%-55%-60%-65%-70%-75%-80%-CO。調節設定值 5 秒鐘不操作，顯示屏恢復顯示環境濕度，即表示濕度設定完成。
CO 表示無論環境濕度高低，機器將不受濕度影響，保持連續除濕模式工作。

定時關機【定時鍵】



可設定自動關機時間(1-24 小時)。按定時鍵，顯示屏閃亮著已設定之時間，初始設定值為“00”。於 5 秒內按上/下鍵可調較自動關機時間。每按一下，自動關機時間將遞增或遞減 1 小時。在完成設定 5 秒後，LCD 顯示屏會回復顯示環境濕度。定時設定完成。

💡 有設定定時情況下，如果在 5 秒內按定時鍵 2 次，定時功能設置將被取消。

💡 如果關閉本機並重新打開，自動計時器關閉設置將被取消。

風速調節【風速鍵】



按風速鍵可在低風，中風，高風 3 檔風速之間切換。使用者可根據情況選擇合適的風速。

💡 風速建在自動模式和化霜模式不可用。

擺風功能【擺風鍵】



按擺風鍵以調較導風板的送風角度。開機後，導風板將打開指 90° 位置。按一次擺風鍵，導風板將在 45° 至 90° 之間保持擺動。再次按下擺風鍵，導風板將停止擺動。關機後，導風板將自動關閉。

Turn on the device, the deflector will move to the vertical position. Press air deflector button once, the deflector will keep waving between 45° to 90°. Press air deflector button again, the deflector will stop waving. Turn off the device, the deflector will close automatically.



Air Deflector Function [Air Deflector button]

💡 Fan speed button is invalid at auto mode and defrost mode.

meet the different usage requirements.

Press the fan speed button to select your preferred fan speed setting of low, medium and high to



Fan Speed Option [Fan Speed button]

💡 Auto timer off setting will be canceled if switch off the unit and switch on again.

💡 Auto timer off setting will be canceled if press timer button for 2 times in 5 seconds.

for automatic shut off setting by each press.

00-24-00

Press the timer button, then press up/down buttons to select your preferred timer hour from



Auto Shut-off Timer Function [Timer button]

Multifunction Optional [Mode Selection button]

Laundry Drying Mode



At manual mode, press the mode button once to select Laundry Drying mode, the unit runs in continuous dehumidification with high fan speed for 6 hours then switch off automatically.

Air Purifying Mode



Press the mode button 2 times to select Air Purifying mode, the unit runs with high fan speed without dehumidifying.
 Add HPEA filter to enhance air purifying performance. Please note HEPA filter is not necessary for dehumidifying feature.


Sleeping Mode



Press the mode button 3 times to select Sleep mode, the unit runs with a designated humidity setting of 55% along with low fan speed. All indicators will be off 5s after the setting is completed. Touch any button to activate the light, and to operate as usual.
 Fan speed button is valid.
 With no further operation after activate the light for 30s, lights will be off again.
 When the water tank is full on sleep mode, water tank full indicator will always be on.

多功能可選 [模式鍵]

乾衣模式

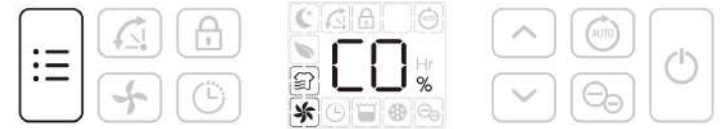

在手動除濕模式工作時，按模式鍵一次選擇幹衣功能，機器將以高風連續除濕模式工作 6 小時後自動關機。

空氣淨化功能



在手動除濕模式工作時，按模式鍵兩次選擇空氣淨化功能，機器將以高風模式運行，沒有抽濕功能。配合打開負離子功能效果更佳。

增加 HEPA 濾網可以增強空氣淨化功能；請留意 HEPA 濾網在抽濕功能時非必要配件。

睡眠模式



在手動除濕模式工作時，按模式鍵三次選擇睡眠模式，機器將以預設設定濕度55%，低風狀態工作。設定完成後5秒，所有指示燈全部熄滅，按任意鍵可喚醒機器後再繼續操作。

風速建可調節

喚醒後30秒內無操作，機器將再次進入息屏狀態。

睡眠模式下水滿，水滿指示燈常亮。

鎖鍵功能 [鎖鍵]



按一次鎖鍵可以將控制台上所有按鍵上鎖，上鎖後，所有按鍵操作無效。同樣操作可以解鎖。

鎖鍵功能在待機時也可啟用，但水滿時無法啟用鎖鍵功能。

低溫除霜功能



當環境溫度過低，機器進入除霜模式，機器將以高風速運行，壓縮機不工作。待除霜結束，機器將自動恢復到之前工作模式。

水滿自動停機功能



當水箱水滿或者水箱未放置到位時，機器伴隨蜂鳴器響五聲，水滿指示燈亮起。清空水箱並將水箱放置回原位後，機器會自動按之前工作模式運行。

水滿燈亮時，除了電源鍵有效，其它按鍵操作均無效。

The unit will enter into the standby mode when water tank is full or the water tank is not installed properly.
After emptying the tank or install the tank properly the unit will go on to the previous mode.
Except for the power button, all other buttons are invalid.



Auto Shut off with Water Tank Full Indicator

When the ambient temperature is too low, dehumidifier will enter into the defrost mode, the unit runs with high fan speed without dehumidifying.



Low Temperature Defrost Indicator

Press the safety childlock button to lock all buttons with a beeping sound, the same operation can unlock it.
Safety childlock function can be set at standby mode and working mode but can't be activated when water tank is full.




Safety Childlock Function [Safety Childlock Button]

記憶功能


- 直接拔掉插頭或在斷電情況下重新接駁電源: 抽濕機會按關機前設定的模式運行，定時器會按之前設定繼續運行。
- 按開/關鍵關掉抽濕機，然后再按開/關鍵啟動: 抽濕機會按關機前設定的模式運行，但定時器不適用。
- 如按開/關鍵關掉抽濕機，然後拔掉插頭後，再重新接駁電源: 抽濕機會按出廠設定運行。

清潔


經常使用時，過濾網可能會被灰塵和顆粒物堵塞。因此應至少每兩周清潔一次過濾網。請按照以下步驟操作：

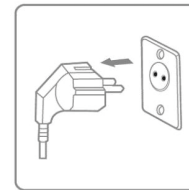


1. 清潔或檢查本機前，必須先關機及拔掉插頭。

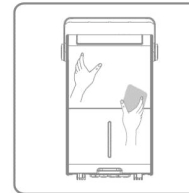

2. 用柔軟的幹布清潔外殼。使用溫和的清潔劑。用微濕的清潔劑擦拭除濕機。切勿用水噴灑機器。

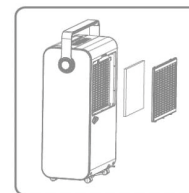

3. 取下空氣濾網和 HEPA 網 (如有)，請以水或吸塵機清潔空氣過濾網，並自然風乾，水溫不高於 40°C 。若有使用 HEPA 濾網，請定期更換 HEPA 濾網。

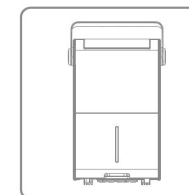


4. 晾乾後將 HEPA 濾網和空氣濾網裝回原來位置


Clean

When used regularly, the filter may become clogged with dust and particles. Therefore the filter should be cleaned at least every two weeks. Follow these steps:


1. Switch the device off and remove the plug from the socket before cleaning.

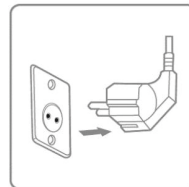


2. Clean the housing with soft, dry cloth. If the device is extremely dirty, use a mild cleaning agent. Wipe the dehumidifier with a slightly damp cloth. Never spray the device with water.

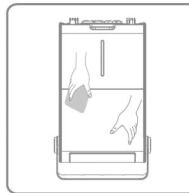

3. Remove the air filter and HEPA filter (if any), clean the filter with a vacuum cleaner or soapy, water no hotter than 40°C. Replace the HEPA filter regularly if used.

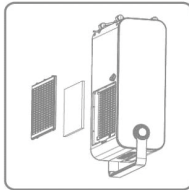

4. Rinse and dry the filter completely before installing back to the device.

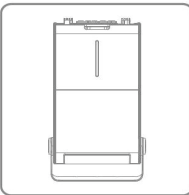

Memory Function:

- When unplugged directly or power cut, then reconnect to the power supply, the dehumidifier will run with the mode prior to the shutdown. The timer setting will be kept.
- Press the power button to switch off the dehumidifier, and then press the power button to switch it back on. The dehumidifier will run with the mode prior to the shutdown. The timer setting will be canceled.
- Switch off the dehumidifier and unplug the power cord, then reconnect the power supply and switch on the dehumidifier. It will run as factory preset mode the first time you received the dehumidifier.

儲存

當長時間不使用時，請:

- 1. 將殘留於水箱內的水全部倒掉，擦乾水箱。
- 2. 拔掉插頭，將電源線捲起並紮好。
- 1. 清理空氣過濾網。
- 2. 包裝好本機以防止灰塵進入機內，以及存放於乾爽通風處。

注意: 為確保本機件暢順及避免毀壞，在不使用時請勿傾斜式橫放置此產品。

故障代碼

若機器出現以下代碼，請聯繫當地經銷商。

代碼顯示	E1	E2
故障原因	溫度感測器故障	濕度感測器故障
顯示狀態	每 30 秒閃爍顯示 E1	每 30 秒閃爍顯示 E2
機器狀態	機器仍可工作	機器仍可工作 濕度固定顯示 50% 。

Display Error Code

Display Code	E1	E2
Error	Temperature sensor error	Humidity sensor error
Display	Flash every 30 seconds	Flash every 30 seconds
What is happening	Device still dehumidifies but is in defrost mode only.	Device still dehumidifies but is in continuous dehumidifying mode only.

Please contact local distributor if any of the error codes below appears.

Storage

If the dehumidifier will not be used for a long period of time, take the following steps:

- 1. Remove the plug from the socket and empty the tank, make the tank and the dehumidifier dry completely, this may take a couple of days.
- 2. Clean the air filter .
- 3. Check the dehumidifier for perfect condition to ensure a safe use of it after a long period of storage.
- 4. Pack the device with the suitable packaging.
- 5. Store the dehumidifier in a dust-free and out of direct sunlight location, preferably covered with a sheet of plastic.

Trouble Shooting

Check the following before contacting technical support .

PROBLEM	POSSIBLE CAUSE	SOLUTION
The device does not work	The power is not connected	Insert the plug into the wall outlet
	The water tank is full	Empty the tank
	The tank has not been replaced correctly	Replace the tank
	Runtime is too short	Be patient and wait
Water removal capacity is too low	Ambient temperature or humidity is too low	It is normal that the device does not dehumidify in these conditions
	The room is too big	We recommend using a dehumidifier with a greater capacity
	There is too much ventilation	Reduce ventilation(e.g. close windows and shut doors)
The device works, but reduces the relative humidity insufficiently	The air filter is clogged	Clean the air filter
	Set humidity is higher than the ambient humidity	Set the humidity lower than ambient humidity
	The dried air is passed over heating coils before it is blown into the room as part of the dehumidifying process	This is normal, a dehumidifier is not an air cooler
Dehumidifier is blowing out warm air	The display shows the room relative humidity not the set point	Press the humidity control button once to see the target relative humidity
Water on floor	There is residual water in tank, and the device is lurched too much by moving	Be careful when move the tank
The dehumidifier is noisy	The air filter is blocked or the device is on an uneven surface	Clean the filter or put the device on a flat surface

疑難小百科

本機不運作：

- 插頭是否已插電？
- 室內電源總掣是否已開了？
- 室溫是否低於 5℃ 或高於 35℃ ？因以上已超出本機操作範圍。
- 確保開關掣已啟動。
- 檢視水箱是否正確地放好，而且並未水滿。
- 確保出入風口沒有堵塞。

本機沒有抽濕：

- 問: 濾網是否封了塵或太髒？
答: 將濾網取出用溫水(低於 40℃) 清洗，自然風乾後再放回。
- 問: 出入風口是否被堵塞？
答: 請移走阻塞出入風口的物件。
- 問: 室內濕度是否已頗低？
答: 如所設置的濕度高於室內濕度，抽濕機沒有運作，這是正常的。

本機不停抽濕：

- 問: 是否門窗沒有關上？
答: 請關上屋內的門窗。
- 問: 室內是否有製造大量濕氣的東西？
答: 請將這些物品處於另一獨立空間內、蓋好廁蓋及蓋上水杯蓋。

本機噪音太大？

- 請檢視機是否放在平行水準線的地面。

本機漏水：

- 檢視本機是否操作正常，確保產品沒有傾斜式橫放。
- 如果你不是進行連續排水，請確保水箱未滿或清空。

產品參數表


型號:	ZD2733
除濕能力:	16L/DAY (26.7°C RH=60%) 28L/DAY (30°C RH=80%)
額定電壓:	220V~
額定頻率:	50Hz
輸入功率:	240W (26.7°C RH=60%) 380W (35°C RH=80%)
水箱容積:	6.0L
風量:	175 m³/h
製冷劑:	R134a/0.23kg
噪音（聲壓級）:	42 dB(A)
淨重:	15.5 kg
排氣壓力:	1.0MPa
回氣壓力:	2.5MPa



有關氟化氣體

- 氟化溫室氣體往往藏在緊緊密封的家電設備中。至於（在有些機種中的）這些氟化溫室氣體的類型，數量與相當的二氧化碳噸數方面的資訊，請參見該機種的相關標籤。
- 本機的安裝，維護服務與修理必須由合資格的技術人員來執行。
- 本機的卸裝與回收必須由合資格的技術人員來執行。

 Note About Fluorinated Gases
-Fluorinated greenhouse gases are contained in hermetically sealed equipment. For specific information on the type, the amount and the CO₂ equivalent in tonnes of the fluorinated gas(on some models), please refer to the relevant label on the unit itself.
-Installation, service, maintenance and repair of this unit must be performed by a certified technician.
-Product uninstillation and recycling must be performed by a certified technician.



Model No.:	ZD2733
Dehumidify capacity:	16L/DAY (26.7°C RH=60%) 28L/DAY (30°C RH=80%)
Rated Voltage:	220V~
Rated Frequency:	50Hz
Input power:	240W (26.7°C RH=60%) 380W (35°C RH=80%)
Tank Capacity:	6.0L
Air Volume:	175m³/h
Refrigerant:	R134a/0.23kg
Noise Level(sound Pressure):	42dB(A)
Net weight:	15.5 kg
Suction Pressure:	1.0MPa
Discharge pressure:	2.5MPa

Specifications